


User Manual / 使用説明書

Haenim Smart DUO

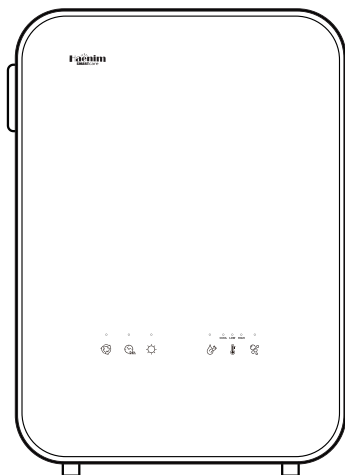

產品規格

產品名稱	Haenim喜臨UV LED消毒烘乾機(SMART DUO)
型號	HN-SS
款式	座檯式
額定電壓(V)/額定頻率(Hz)	AC 220V / 50Hz
總額定消耗電功率	95W
烘乾/消毒方式	內置型PTC加熱器 / UVC LED
尺寸	295(W) x 375(D) x 425(H) mm
重量	7.2kg

- 使用前，請仔細閱讀本使用說明書，並妥善保存以備將來參考。
- 為了顧客的安全及正確使用產品，使用前務必仔細閱讀。
- 安全注意事項旨在保護使用者的安全並防止財產損失。
- 如果本產品有任何問題，請參閱本使用說明書。
- 本使用說明書包含產品保證書，請妥善保管。
- 本使用說明書的內容可能根據公司內部情況進行更改。

內容

安全注意事項	4
產品概要	6
產品使用說明	7
UV LED盛水盆清潔及使用說明	9
常見問題 (FAQ)	10
產品保養登記	20

安全注意事項

此說明書旨在確保安全、正確地使用產品，預防意外風險或損壞，請務必遵守涉及電源、安裝及使用方面的注意事項。

安全相關注意事項根據潛在風險與損害程度、危險發生時的緊急程度，分為「警告」與「注意」兩種。

種類	標示	說明
警告		若不遵守，可能導致重傷或死亡的潛在危險事項
注意		若不遵守，可能導致產品損壞或輕傷的潛在危險事項

警告

- 本產品為家庭用/室內用產品。
對於將產品用於明示用途以外的用途，或因使用不當而發生的事故或損失，恕不承擔責任。
- 本產品為 220V / 50Hz 專用產品。
使用前請確認供電電壓是否與標籤上的額定電壓一致，以及插座是否安全接地。
- 可能導致觸電或火災危險。
- 請勿使用變壓器轉換電壓使用。
- 可能導致觸電或火災危險。
- 請勿損壞、過度彎曲、拉扯、扭轉或捆綁電源線。
此外，請勿將其掛在金屬部分或在電源線上放置重物。
- 可能導致觸電或火災危險。
- 請勿擅自重新連接或加工電源插頭及電源線。
- 可能導致火災或觸電危險。
- 手濕時，為免觸電，請勿接觸電源插頭。
- 可能導致觸電危險。
- 本產品禁止缺乏相關經驗與知識，且在無監督或指導下無法安全使用設備的人員（包括兒童）使用。
- 請勿在一個插座上同時插入多個產品的電源線，請單獨使用 5A 以上的插座。
- 可能導致發熱、起火、火災或觸電危險。
- 產品運作期間請勿強行拔除電源插頭。
- 可能導致觸電或火災危險。
- 移動產品時，請勿拉扯電源線移動。
- 可能導致觸電或火災危險。
- 長時間不使用產品、清潔及保養前，或外出時，請務必拔除電源插頭。
- 若電源插頭或電源線損壞，請立即停止使用，並聯繫客戶服務中心。
- 使用過程中因疏忽導致電源線外皮破損或凹陷時，存在火災及觸電危險。請隨時檢查電源插頭與電源線的狀態。

安全注意事項

警告



- 請勿擅自拆解、修理或改裝本產品。
對於因使用不當而導致的事務或損失，
本公司一概不負責。
- 請放置於嬰幼兒無法觸及的地方。
- 可能導致觸電、身體受傷或產品故障。
- 請勿將產品放置在有爆炸危險的物品、
易燃氣體或易燃燃料旁。
- 可能存在觸電、火災或身體受傷的危險。
- 請勿放置在瓦斯爐、
發熱器具等使用明火或高溫的設備附近。
- 可能導致火災、變色、變形或產品故障。
- 請勿在水槽、浴室、
游泳池等潮濕環境中使用。
- 可能導致觸電、漏電或身體受傷。
- 若產品進水，請停止使用並聯繫客戶服務中心。
- 使用產品期間若發生故障或異常需維修時，
請聯繫客戶服務中心。
- 請避開風雨侵襲或陽光直射處，並放置於平坦的
表面上。
- 可能導致觸電、火災、變色、變形或產品故障。
- 請勿在產品內部放入耐熱性低的塑膠、
稀釋劑(天拿水)、苯等物質。
- 可能導致火災或產品故障。
- 請勿在打開機門時強制內置的 UV LED 運作，
以免眼睛或皮膚直接接觸光線。
- 存在身體受傷的危險。
- 請勿讓寵物進入產品內部，
嚴禁在寵物留在內部的狀態下運行產品。
- 存在導致使用者及寵物身體受傷、觸電或火災的危險。

注意





- 本產品機門裝有玻璃，若開啟超過 180°，
重心會向門偏移導致產品傾斜。
- 內部沒有放置物品時，請勿將機門完全打開。
- 可能導致產品故障、損壞或身體受傷。
- 請確保兒童不要攀爬或倚靠在產品機門上。
- 可能導致產品故障、損壞或身體受傷。
- 請注意不要讓寵物或兒童接觸到產品的
包裝塑膠袋。
- 存在受傷或窒息之危險。
- 產品運作時，請勿在上方放置其他物品或
瓦斯爐等設備使用。
- 可能導致產品損壞、火災或受傷。
- 清潔時請勿使用噴霧式殺蟲劑、汽油、
稀釋劑(天拿水)、苯、漂白水等。
- 可能導致火災、變色、變形或產品故障。
- 放置時請保留一定空間(約 10cm)，
確保產品背面的過濾網能正常吸氣與排氣。
- 可能導致產品故障或火災。
- 乳膠素材(Latex)易受 UV 影響而老化，
請勿放入產品內消毒。
- 請注意不要讓手、
腳或其他物體勾到電源線導致產品翻倒。
- 可能導致產品故障、損壞或身體受傷。
- 請注意不要讓寵物或兒童損壞電源線。
- 可能因電源線損壞而導致觸電或火災。
- 電源插頭上的異物請用乾布擦拭乾淨。
- 可能導致觸電或火災。

產品概要

機身 前方/後方

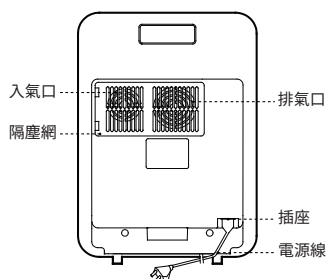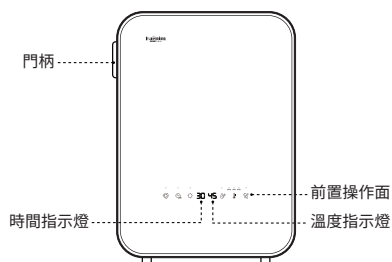


機身內部

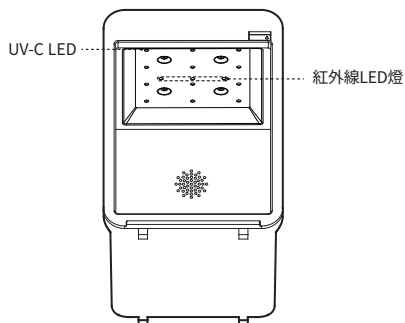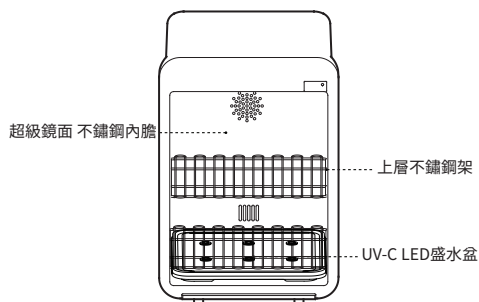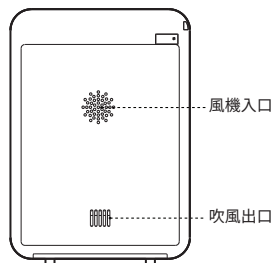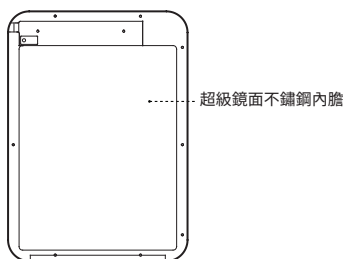

附屬零件



不鏽鋼架 X 2



UV-C LED盛水盆




電源線



使用說明書

產品使用說明

功能介紹

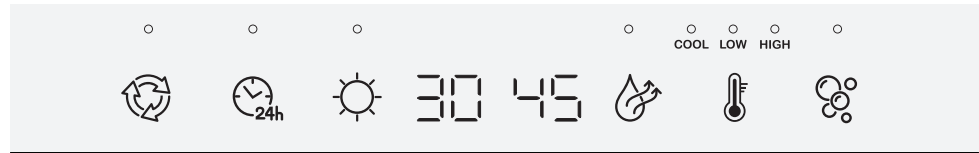

 Auto 自動模式	按一下按鈕即可同時進行烘乾與殺菌！ • 按下AUTO按鈕一次 / 自動 1 模式：30 分鐘（烘乾 20 分鐘 + 消毒 10 分鐘，同時吹風） • 按下AUTO按鈕兩次 / 自動 2 模式：50 分鐘（烘乾 40 分鐘 + 消毒 10 分鐘，同時吹風） • 按下AUTO按鈕三次 / 自動 3 模式：70 分鐘（烘乾 60 分鐘 + 消毒 10 分鐘，同時吹風）
 Storage 儲存模式	24 小時持續保持清潔！ • 24 小時內每隔 3 小時執行一次「自動 1 模式」。包括烘乾 20 分鐘、消毒 10 分鐘（同時吹風 30 分鐘），合共 30 分鐘。每 3 小時 1 次，共 8 次循環。 • 建議先選擇「自動 / 消毒」模式，再按下 STORAGE 按鈕，當完成以上模式，3 小時後便會開始進行第 1 次循環。 • 在「儲存模式」下，若中途開關機門，將會自動進行消毒 1 分鐘（同時吹風 1 分鐘）
 Sterilize 消毒模式	需要時，簡單進行殺菌！ • 按下UV LED按鈕一次 / 消毒 1 模式：10 分鐘（同時吹風） • 按下UV LED按鈕兩次 / 消毒 2 模式：20 分鐘（同時吹風）
 Dry 烘乾模式	不需殺菌，只需單獨烘乾時！ • 按下DRY按鈕一次 / 烘乾 1 模式：30 分鐘（烘乾 30 分鐘，同時吹風） • 按下DRY按鈕兩次 / 烘乾 2 模式：50 分鐘（烘乾 50 分鐘，同時吹風） • 按下DRY按鈕三次 / 烘乾 3 模式：70 分鐘（烘乾 70 分鐘，同時吹風）
 Temp 溫度模式	執行自動/烘乾模式時，選擇想要的烘乾溫度。 • COOL: 設定為自然風風乾模式 • LOW: 設定為不高於 45°C 烘乾模式 • HIGH: 設定為不高於 60°C 烘乾模式
 Clean 清潔模式	自動清潔提醒！ • 累計使用 60 小時後顯示清潔提醒。 • 內部清潔後按下「Clean」按鈕，時間將重新計算（Reset）。 • 達 60 小時前按下「Clean」按鈕可確認目前的累計使用時間。

指南事項

- 使用自然風烘乾功能時，可能比暖風烘乾需要更長時間。
- 本產品抽入外部空氣進行烘乾，內部溫度與烘乾效能可能因周邊環境與室內溫度而異。

產品附加功能

靜音模式

- 長按「清潔模式 (Clean)」按鈕約 5 秒以上, 即可開啟靜音功能並關閉提示音。
- 再次長按 5 秒以上即可解除靜音, 恢復正常提示音。
- 此功能僅關閉提示音, 不影響運作模式。

產品使用說明

正確使用指南


使用產品前請先確認以下內容，確保使用過程更安全、更方便。

- 奶瓶、奶嘴及配件請務必清洗乾淨後再放入。
- 將奶嘴與配件分開清洗會更加衛生。
- 放置奶瓶與配件時請保持一定距離，避免重疊擺放。
- 無需烘乾的產品可單獨選擇「消毒模式」進行約 10 分鐘的消毒。
- 乳膠 (Latex) 物料產品不可使用消毒模式。
- 對於可能會在溫度超過 45°C 變形的產品，只可使用消毒模式。

喜臨奶瓶消毒機不論奶瓶以上下方向放入，皆可進行消毒與烘乾。

透過上、下方的 UV-C LED 與雙風扇烘乾系統，

使內部空氣全面循環，確保均勻地消毒與烘乾。

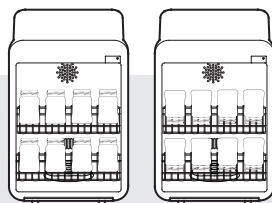

⚠ 注意事項

- 本產品機門裝有玻璃，開啟超過 180° 時重心會向門側偏移，可能導致產品傾斜。
- 內部沒有放置物品時，請勿將機門完全打開。
- 請勿對機門施加壓力，或抓著機門移動產品。
- 請確保兒童不要攀爬或倚靠在機門上。
- 若產品傾斜，可能會導致手腳夾傷或發生安全事故，使用時請格外注意。

使用方法

安裝指南


放置時請務必放於平坦且堅固的表面等穩定位置。

請勿放置在瓦斯爐、氣炸鍋等會產生熱源的設備附近。


請避免放置於受陽光直射或風雨直接接觸的場所。

電源連接

電源線請連接至 AC 220V / 50Hz 專用插座。

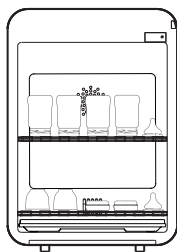

奶瓶、
奶嘴及配件請保持距離，
避免相互重疊。

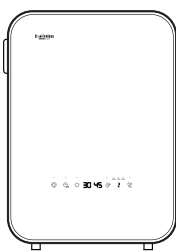

選擇所需的模式與時間後，
按下「儲存 (Storage)」鍵，
原功能結束後將接著執行儲存模式。



在儲存模式運作期間，
若開門後再次關上，
將自動執行 1 分鐘消毒。



儲存模式可維持 24 小時，
每隔 3 小時會自動執行一次
「自動 1 模式」。



運作期間即使開門放入或取出物品，時間也不會重置，暫停後將接著繼續運作。

UV LED盛水盆清潔及使用說明

注意事項：清潔前請務必拔掉電源線。

產品外部及內部清潔與保養

外部及內部清潔方法

產品外部請使用沾有溫水的軟布擦拭，隨後再用乾布重新擦拭至完全擦乾水分。

產品內部請使用沾有溫水或稀釋醋水的軟布擦拭，並用乾布完全擦乾水分。

建議每個月將產品背面的濾網拆下並用水清洗一次。


注意事項

清潔時請勿使用清潔劑或化學品。

UV LED盛水盆清潔及使用說明

請對準無線充電部分的中心位置放置。

請將一個層架放置在盛水盤上方的層架托上，另一個放置在上層的層架托上使用。

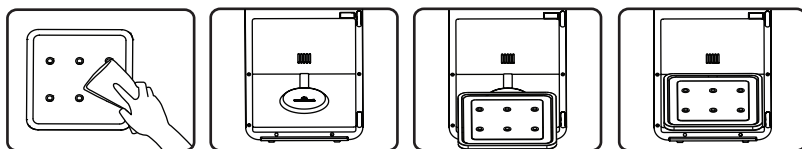

UV 無線盛水盤清潔方法


本產品防水等級為 IPX5，切勿浸泡在水中清洗，只可使用流動的清水沖洗。



層架使用

如圖所示，若需消毒的零件相互重疊或遮擋 UV-C LED，可能會降低消毒效果。

請保持一定間距擺放，避免重疊。

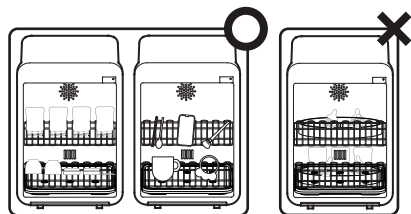

常見問題 (FAQ)

請在維修之前, 先參閱下面的常見問題與答。

問題	解答
時間顯示UE是什麼意思？	Haenim 奶瓶消毒機 Smart Duo 頂部內置 12 個 UV-C LED，可拆卸的 UV LED 無線盛水盤則裝有 6 個 UV-C LED。在總共 18 個 LED 中，若有任何一個未亮起，錯誤感應器將會啟動並顯示「UE」。此錯誤無法自行修理，請聯繫客戶服務中心。
按鍵時沒有聲音！	長按「CLEAN」按鈕 5 秒以上會啟動靜音功能。再次長按 5 秒以上即可解除靜音。若透過此方法仍無聲音，請聯繫客戶服務中心。
奶瓶消毒機內部發出聲音！	若將物品放置在消毒機內部的暖風出風口附近，熱氣可能會傳導至鐵板後方產生膨脹聲。建議儘量不要將物品靠近暖風出風口，請保持一定距離使用。若問題仍未解決且持續產生噪音，請聯繫客戶服務中心。
我需用什麼清潔內部？	可以一杯水加十滴醋製作天然清潔劑，並將其噴灑在不鏽鋼內膽，再用乾淨的布擦拭。建議每周清潔一次，並在清潔後將門打開一段時間，以保持不鏽鋼內膽乾爽通風。
如何棄置消毒機？	如果您想棄置Haenim消毒機，請勿自行拆卸或嘗試將其放入一般垃圾桶或回收箱中。請致電您當地的衛生服務中心並諮詢協助。

Product Specifications

Model Name	HN-SS Series
Product Name	Haenim UV-C LED Sterilizer, Smart DUO
Rated Voltage	AC 220V, 50Hz
Power Consumption	95W
Drying Method	PTC Heater, FAN
Sterilization Method	UV-C LED
Product Size (mm)	295 (W) X 375 (D) X 425 (H)
Product Weight	7.2kg

- The contents of this user manual are subject to change depending on the company's internal circumstances.
- Before use, please this manual carefully and save it for future reference.
- In the case of any problems with this product, please refer to this manual.
- Please save this manual as it contains the product warranty.

Contents

Safety instructions	-----	4
Product overview	-----	6
How to Use	-----	7
UV Wireless Water Tray Use and Cleaning Method	-----	9
FAQ (Frequently Asked Questions)	-----	10
Warranty service	-----	11

SAFETY INSTRUCTIONS

The following instructions are intended to prevent unexpected risks or damage by ensuring the safe and accurate use of the product. Please follow these precautions regarding power, installation, and usage.

Safety precautions are categorized into "Warning" and "Caution" based on the severity of the potential risk or damage and the urgency of the situation.

Category	Symbol	Description
Warning		Potential risks that could lead to serious injury or death if not followed.
Caution		Potential risks that could lead to product damage or minor injury if not followed

 Warning

- This product is for household indoor use only. The company is not responsible for accidents or losses caused by improper use or use for unintended purposes.
 - This product is for 220V / 60Hz only. Before use, check if the supplied voltage matches the rated voltage on the nameplate and ensure the socket is safely grounded.
 - Risk of electric shock or fire.
 - Do not use a transformer to convert the product's voltage.
 - Risk of electric shock or fire.
 - Do not damage, excessively bend, pull, twist, or tie the power cord. Also, do not hang it on metal parts or place heavy objects on the cord.
 - Risk of electric shock or fire.
 - Do not arbitrarily reconnect or process the power plug or power cord.
 - Risk of fire or electric shock.
 - Do not plug or unplug the power plug if your hands are wet.
 - Risk of electric shock.
- Use of the device is prohibited for persons (including children) who lack experience and knowledge and cannot use it safely without supervision or instruction.
 - Do not plug multiple power cords into a single outlet at the same time; use a single outlet of 5A or higher independently.
 - Risk of overheating, ignition, fire, or electric shock.
 - Do not forcefully pull out the power plug while the product is in operation.
 - Risk of electric shock or fire.
 - Do not pull the power cord to move the product.
 - Risk of electric shock or fire.
 - Always unplug the power plug when the product is not used for a long time, before cleaning and maintenance, or when going out.
 - If the power plug or power cord is damaged, stop use immediately and contact the customer center. Please check the status of the power plug and cord frequently.

SAFETY INSTRUCTIONS

Warning


- Do not disassemble, repair, or modify this product arbitrarily. The company is not responsible for accidents or losses caused by improper use.
- Install the product in a location out of reach of infants and children.
 - This may cause electric shock, physical injury, or product malfunction.
- Do not install the product near objects with a risk of explosion, flammable gases, or combustible materials.
 - This may cause electric shock, physical injury, or product malfunction.
- Do not install the product near gas stoves, heating appliances, or other products that use fire or high heat.
 - This may cause fire, discoloration, deformation, or product malfunction.
- Ensure that pets do not enter the product, and do not operate it while a pet is inside.
 - There is a risk of physical injury, electric shock, or fire to both the user and the pet.
- If a malfunction or abnormality occurs during the use of this product and repair is required, please contact the customer center.
- Do not put heat-sensitive vinyl, thinner, benzene, etc., inside the product.
 - This may cause fire or product malfunction.
- Avoid areas exposed to wind, rain, or direct sunlight, and install the product on a flat surface.
 - This may cause electric shock, fire, discoloration, deformation, or product malfunction.
- Do not force the built-in UV LEDs to operate by opening the door and avoid exposing your eyes or skin to the light.
 - There is a risk of physical injury.
- Do not use in humid places like sinks or bathrooms. If water enters, stop use and contact the customer center.
 - This may cause electric shock, leakage, or physical injury

Caution


- Since the door has glass attached, opening it more than 180° may shift the center of gravity toward the door and cause the product to tilt. Do not open the door fully when the interior is empty.
 - There is a risk of product malfunction, damage, or physical injury.
- Please ensure that children do not hang on or lean against the product door.
 - There is a risk of product malfunction, damage, or physical injury.
- Keep the product's plastic packaging bags out of reach of pets or children.
 - There is a risk of injury or suffocation.
- Do not place other products or gas burners on top of the product while in use.
 - There is a risk of product damage, fire, or injury.
- Do not use spray insecticides, gasoline, thinner, benzene, or bleach when cleaning the product.
 - This may cause fire, discoloration, deformation, or product malfunction.
- Ensure a certain amount of space (about 10cm) is maintained at the back for air intake and exhaust through the filter during installation.
 - There is a risk of product malfunction or fire.
- Latex materials are vulnerable to UV sterilization, so do not place them inside for operation.
- Be careful not to let hands, feet, or other objects get caught in the power cord, which could cause the product to fall.
 - There is a risk of product malfunction, damage, or physical injury.
- Ensure that the power cord is not damaged by pets or children.
 - There is a risk of electric shock or fire due to cord damage.
- Wipe away any foreign substances on the power plug with a dry cloth.
 - There is a risk of electric shock or fire.

Product Overview


Main Body: Front & Rear

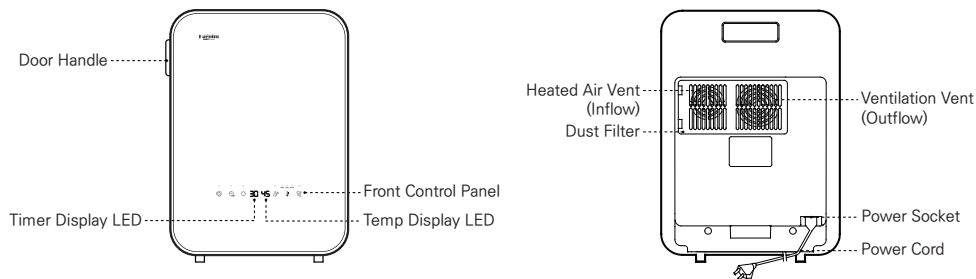

Interior

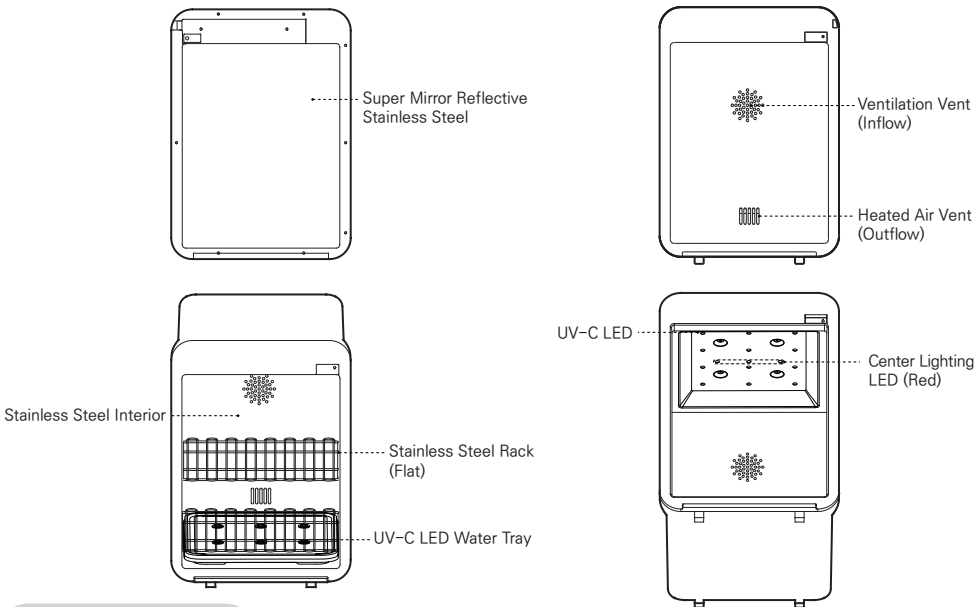

Components

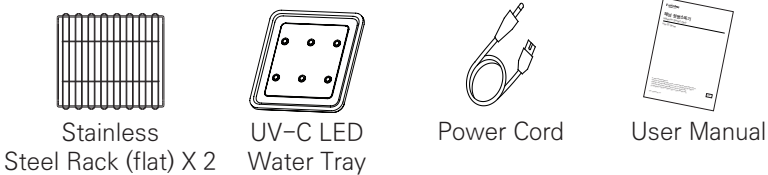

COOL LOW HIGH	
30 45	
Auto Mode	
Drying and sterilization at once with one button • Auto Course 1: 30 min (20 min Dry + 10 min Sterilize, with simultaneous ventilation) • Auto Course 2: 50 min (40 min Dry + 10 min Sterilize, with simultaneous ventilation) • Auto Course 3: 70 min (60 min Dry + 10 min Sterilize, with simultaneous ventilation)	
Storage Mode	
Keep items clean for 24 hours! • Runs Auto Course 1 every 3 hours for 24 hours to maintain cleanliness. • When the door is opened and closed, a 1-minute sterilization runs automatically to block contamination. • Can be used alone or in combination. (If Auto/Sterilize/Dry is run first, Storage mode will follow after it finishes.)	
Sterilize Mode	
Simple sterilization whenever needed! • Sterilize Course 1: 10 min (Powerful UV-C LED sterilization with simultaneous ventilation) • Sterilize Course 2: 20 min (More intensive sterilization with simultaneous ventilation)	
Dry Mode	
Use when you only want drying without sterilization! • Dry Course 1: 30 min (with ventilation) • Dry Course 2: 50 min (with ventilation) • Dry Course 3: 70 min (with ventilation)	
Temp Mode	
You can manually select the desired drying temperature while running Auto or Dry modes! • COOL: Cool: Natural air drying mode. • LOW: Approx. 45°C drying mode. • HIGH: Approx. 60°C drying mode.	
Clean Mode	
This smart feature notifies you of cleaning times, displaying an alert after 60 cumulative hours of use! • Cleaning alert displays after 60 hours of use (reset with the Clean button) • Reset time by pressing the Clean button after internal cleaning. • Press the Clean button before 60 hours to check the current usage time.	

Guidance

- Natural drying (COOL) may take longer than hot air drying.
- Drying performance may vary based on ambient temperature and environment.

Additional Product Features

Mute Function

- Press and hold the Clean button for 5+ seconds to turn on the mute function and turn off the alert sound.
- Press and hold for another 5+ seconds to disable the mute function and restore the alert sound.
- This function only turns off the alert sound and does not affect the operation courses.

How to Use

Guide for Proper Use & Operation


Checking the information below before using the product will allow for safer and more convenient use.

- Always wash bottles, nipples, and accessories before putting them in.
- Nipples are more hygienic when washed separately from accessories.
- Arrange bottles and accessories with enough space to avoid overlapping.
- Items that do not need drying can be sterilized for about 10 minutes using only the sterilization mode.
- Latex products cannot be sterilized in sterilization mode.
- Use only the sterilization mode for products that may deform at temperatures above 45°C.

The Haenim bottle sterilizer can sterilize and dry bottles regardless of which direction they are placed. With top and bottom UV-C LEDs and a dual-fan drying system, air circulates throughout the entire interior, ensuring even sterilization and drying no matter the bottle's orientation.

Caution

- The door has glass attached; opening it more than 180° may shift the center of gravity and cause the unit to tilt.
- Do not open the door fully when the interior is empty.
- Do not apply force to the door or move the product by holding the door.
- Ensure that children do not hang on or lean against the door.
- Be extremely careful as tilting the product may result in limbs getting caught or other safety accidents.

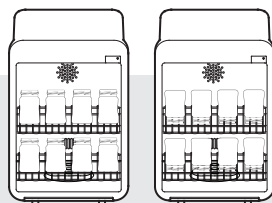

How to Use

Installation Guide


Always place the unit in a stable location on a flat and firm surface.

Do not install near heat-generating appliances like gas stoves or air fryers.

Avoid locations exposed to direct sunlight, rain, or wind.

Power Connection


Connect the power cord to a dedicated AC 220V / 60Hz outlet.

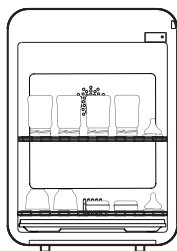

Place bottles, nipples, and accessories with enough space to avoid overlapping.




After selecting the desired mode and time, press the Storage mode button; Storage mode will follow once the previous function ends.

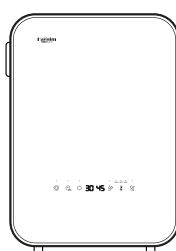

Opening and closing the door during Storage mode will trigger an automatic 1-minute sterilization



3시간 경과

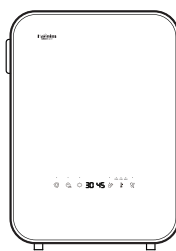

Storage mode lasts for 24 hours, automatically running Course 1 every 3 hours.

If the Storage mode button is not pressed, operation will stop after the set time expires.



Opening the door during operation will not reset the timer; it will pause and then resume from where it left off.

UV Wireless Water Tray Use and Cleaning Method —

Always unplug the power cord before cleaning the unit.

Product Exterior & Interior Cleaning

Wipe the exterior of the product with a soft cloth moistened with warm water. Afterward, wipe again with a dry cloth to completely remove any moisture.

Clean the interior with a soft cloth moistened with warm water or diluted vinegar water, then wipe completely dry with a dry cloth.


It is recommended to remove the filter on the back of the product and wash it with water once a month.

Caution: Do not use detergents or chemicals when cleaning the product.

UV Wireless Water Tray Use & Cleaning

Place the tray aligned with the center of the wireless charging area.

Place one flat shelf on the water tray hanger and the other on the upper shelf hanger.

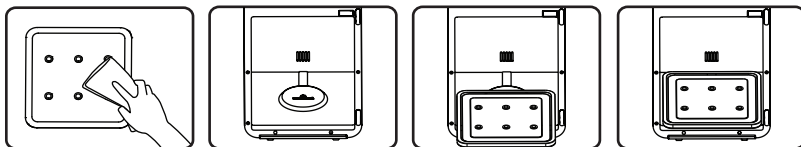

UV Wireless Water Tray Cleaning


This is an IPX5-rated waterproof product; please wash it under running water.

Caution: Do not immerse the tray in water for cleaning. (Waterproof rating IPX5)



Shelf Utilization

As shown in the illustration, the sterilization effect may decrease if items overlap or block the UV-C LEDs. Please arrange items with sufficient spacing and avoid overlapping before use.

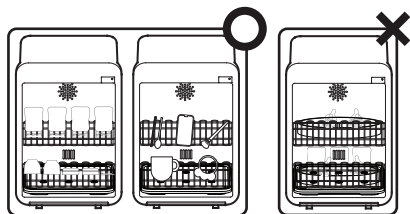

FAQ (Frequently Asked Questions) ---

Please check the following before requesting service.

Question	Answer
What does it mean when "UE" is displayed on the timer?	If any of the 18 UV-C LEDs 12 on top and 6 on the wireless water tray fail to light up, the error sensor displays "UE." As this cannot be self-repaired, please contact the service center.
There is no sound when I press the buttons!	Pressing and holding the CLEAN button for over 5 seconds activates the mute function. Press and hold again for 5 seconds to disable it. If the problem persists, contact the service center.
There is a noise coming from inside the sterilizer!	Placing objects near the hot air outlet may cause noise due to the expansion of the metal plate. Keep objects at a distance from the outlet; If the noise continues, contact the service center.
How do I clean the inside of the sterilizer?	Spray a natural cleaner made by diluting 10 drops of vinegar in a cup of water, then wipe with a soft cloth. Weekly cleaning is recommended; ensure the unit is fully ventilated before use.
How should I dispose of the sterilizer?	Do not arbitrarily discard or incinerate the product. Please contact your local waste management agency or community center for proper disposal.

保養服務計劃

如欲參與 Haenim 喜臨之產品保養服務計劃，必須於購買後14天內，於網上登記保養。

- Haenim 喜臨之香港總代理 - 港豐遠東有限公司，將提供 Haenim UV LED 消毒機之 兩年免費保養 (購買日起計)。
- 保養及維修並不包括人為疏忽而導致之任何損壞。
- 網上保養登記: <http://www.haenim.hk>
- 請保留購買單據正本以作日後保養之用。

Please complete online warranty registration within 14 days after purchase.

- We, Kingsford Far East Ltd., the sole agent of Haenim, in Hong Kong, offer two years warranty to the UV LED Sterilizer (from purchasing date) .
- The warranty will not cover any damages due to negligence or improper handling.
- Online registration: <http://www.haenim.hk>
- Please keep the original purchasing invoice for warranty.

香港總代理:
港豐遠東有限公司

荃灣海盛路 9 號
有線電視大樓 2809A-B 室
電話 Tel: 2348 0433

Sole Agent:
Kingsford Far East Ltd.

Unit 2809A-B, Cable TV Tower,
9 Hoi Shing Road,
Tsuen Wan, NT, Hong Kong



網上登記

www.haenim.hk